

125 438860b

Klemmleiste+  
Funkentstörfilter

Kondensator

Motor

125.44370/

Tür-Schalter  
(untereTür)

L1

N

Erdung

125.44350/

6  
5  
4  
3  
2  
1

H-6  
H-5  
H-4  
H-3  
H-2  
H-1

LEISTUNGS-MODUL

P-1  
P-2  
P-3

BRAUN  
1  
2  
3

M-1  
M-2

ROT  
1  
2

L-1  
L-2

1  
2

N-1  
N-2  
N-3  
N-4  
N-5  
N-6  
N-7



1  
2  
3  
4  
5  
6  
7

J-11  
J-1

125.44380/

124.93321/



Programmwähler

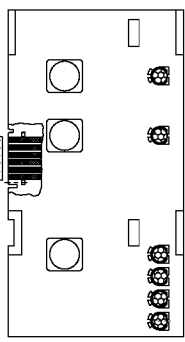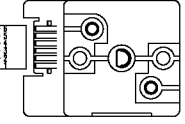

Anzeige-Modul


125.44270/

  Temperaturfühler




125.44360/

 Drum sensor



125.44390/

 
Ein-Aus-Taste




Betriebskontrol  
-lampe

124.51951/

 Heizelement



Niveau-Schalter

 

Türschalter

