 
 
 
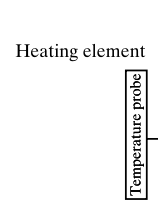 
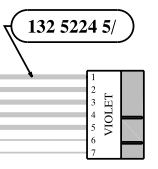 
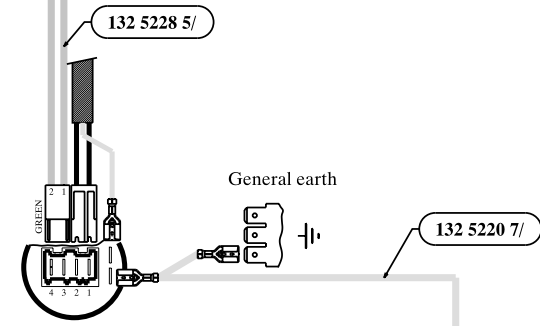 
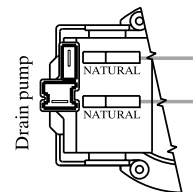 
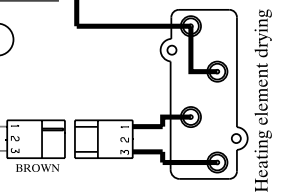 
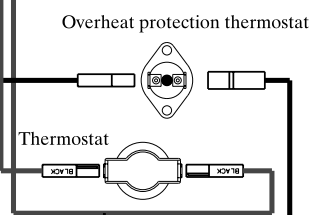 
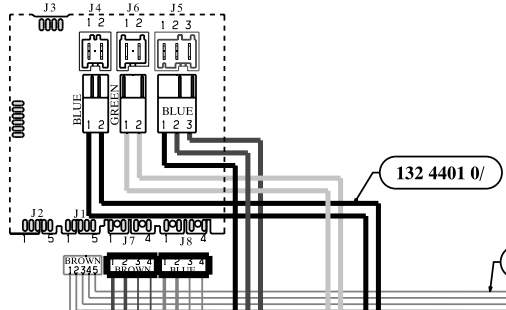 
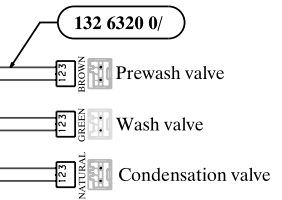 
 
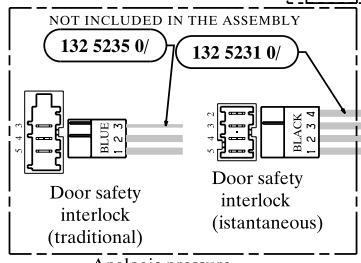 


EWM 2100

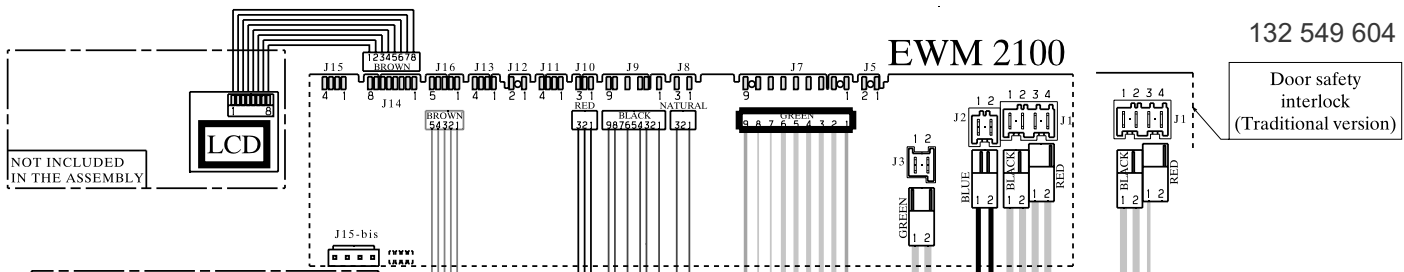

132 4401 0/

132 4404 1/

132 4403 0/

132 6321 0/

132 4405 2/

132 4402 2/

132 5228 5/

132 5220 7/

132 5224 5/

132 6320 0/

132 4400 2/

132 4400 2/

NOT INCLUDED IN THE ASSEMBLY

ONLY FOR MODELS WITH EARTH DRUM

NOT INCLUDED IN THE ASSEMBLY

NOT INCLUDED IN THE ASSEMBLY