



wiring mains terminal

387 694 100

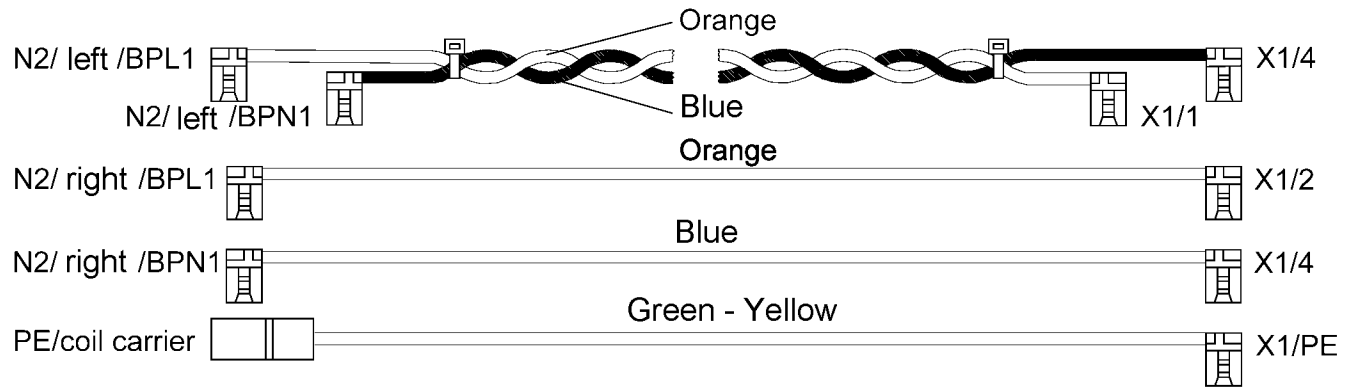

view from TOP

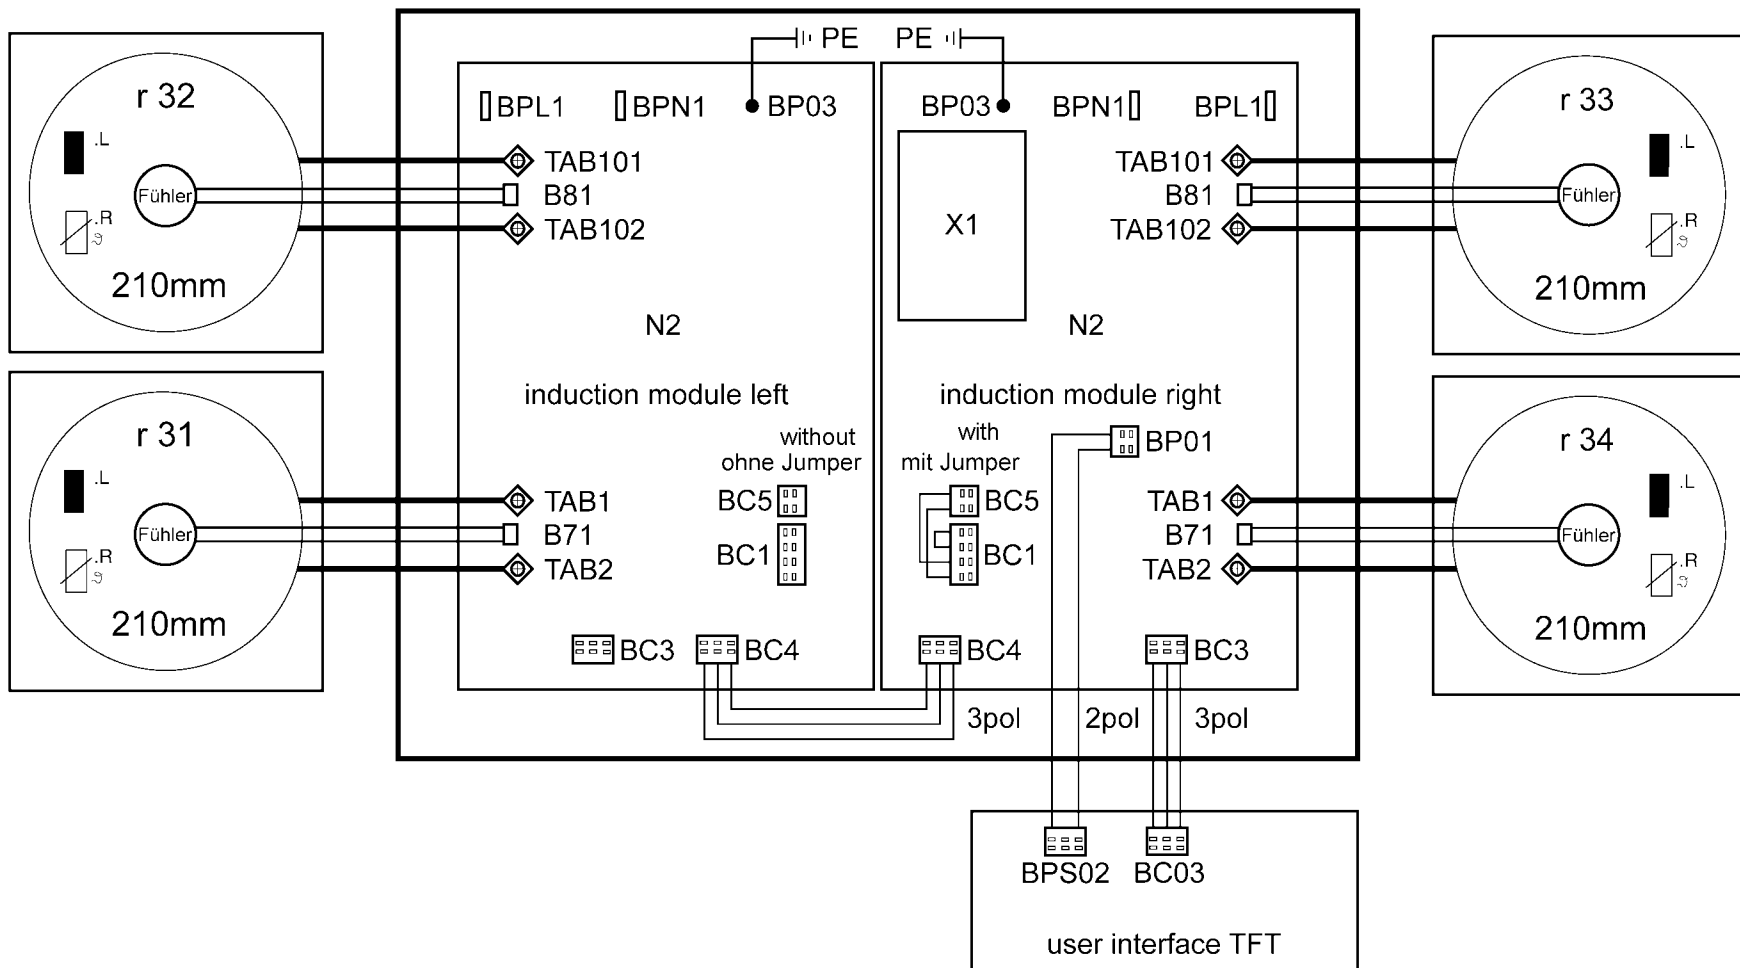

control lines

contact	code
induction module left / BC4 - induction module right / BC4	387 729 900
induction module right / BC3 - user interface / BC03	387 202 500
induction module right / BP01 - user interface / BPS02	387 992 301