
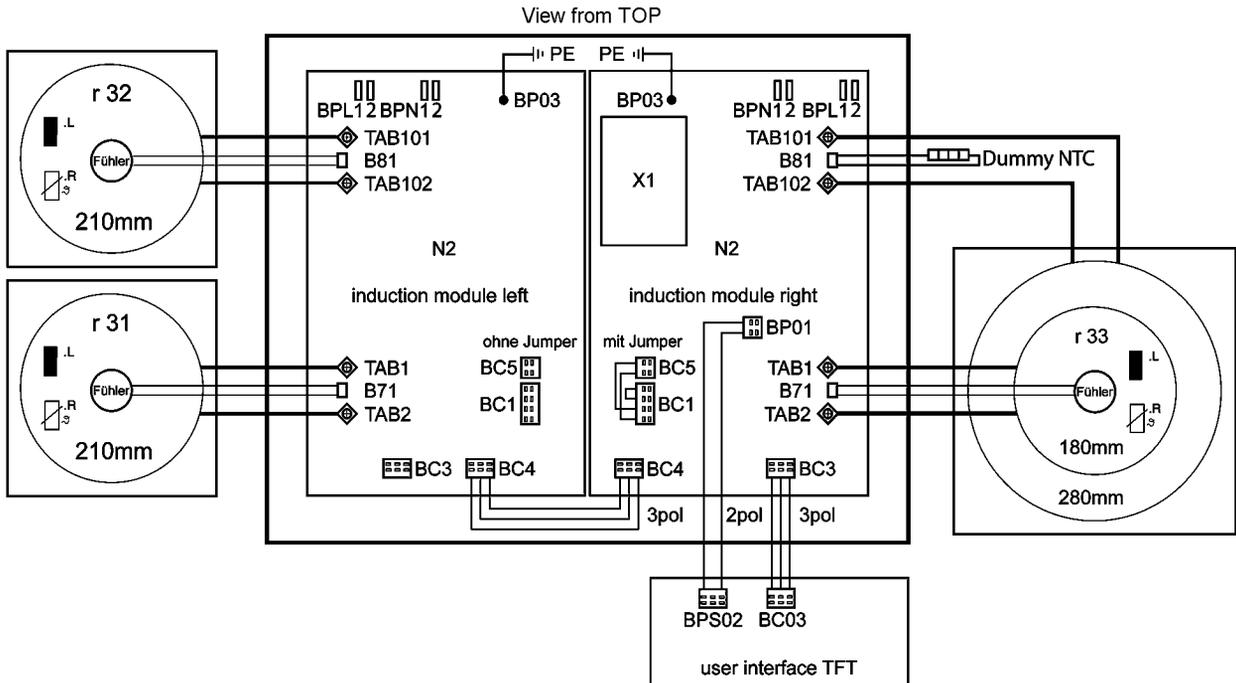


## wiring mains terminal 561 1382 00

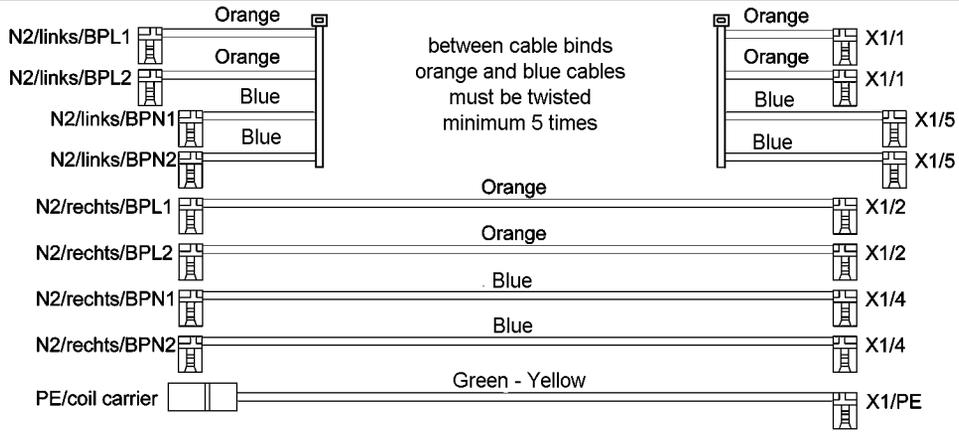

### control lines

contact	code
induction module left / BC4 - induction module right / BC4	387 729 900
induction module right / BC3 - user interface / BC03	387 202 503
induction module right / BP01 - user interface / BPS02	387 992 300
induction module right / B81 (Dummy NTC)	387 540 300

561141700