
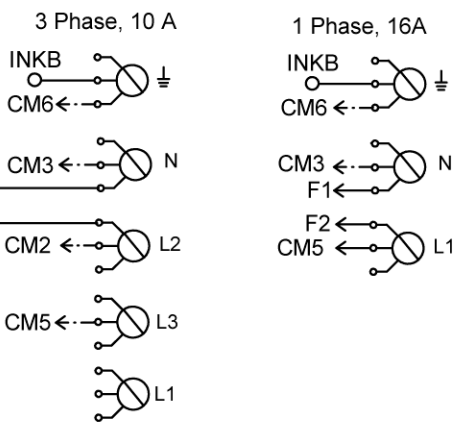


_____ WIRES IN ALL MACHINES
 - - - - - INTERNAL CONNECTION
 - - - - - WIRES IN SOME MACHINES

CABLE POSITIONS
 1: THERMISTOR
 2: COINMETER
 4: MOTOR, DRAIN PUMP, FLOAT SWITCH
 5: DOOR SWITCH
 6: COMMUNICATIONS INTERFACE
 8: POWER
 9: HEATING ELEMENT

RESISTANCES AT ROOM TEMPERATURE (CA. 20°C/68°F)
 VALUES WITH +/-10% ARE REGARDED AS NORMAL COMPONENT

F: RADIO INTERFERENCE SUPPRESSION FILTER 680K Ohm
 NTC 1: THERMISTOR 1 4 - 6 K Ohm
 NTC 2: THERMISTOR 2: 4 - 6 K Ohm
 AP: DRAIN PUMP: 111 Ohm
 CO: COMPRESSOR
 MO: MOTOR
 FB: FLOAT SWITCH
 DB: DOOR SWITCH
 CI: COMMUNICATIONS INTERFACE
 SV: SWITCHING VALVE
 FA: FAN

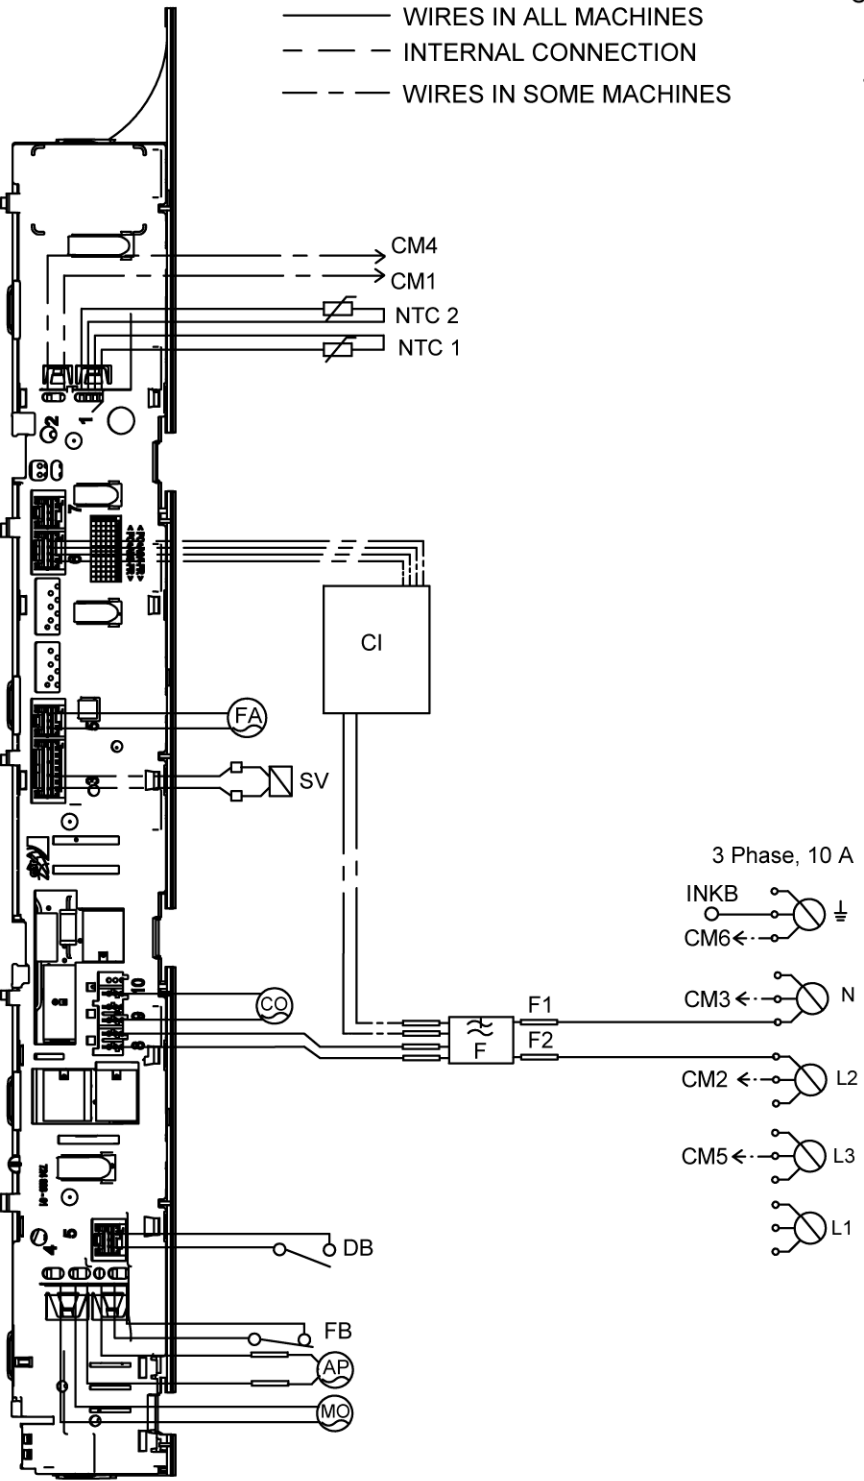

CONNECTOR FOR COIN METER

If coin meter is selected CM1 and CM4 needs to be closed to start the machine (default closed with jumper)

BLACK	CM1	FROM CONTROL UNIT
BROWN	CM2	PHASE
BLUE	CM3	NEUTRAL
BLACK	CM4	FROM CONTROL UNIT
BLUE	CM5	PHASE
YELLOW-GREEN	CM6	GROUND



SERVICE MENU

TURN OFF POWER (S1)
 WAIT FOR AT LEAST 5 SEC
 HOLD S2
 TURN ON POWER (S1)
 PRESS S2 5 TIMES TO ENTER SERVICE MENU

PRESS STOP (S3) TO CHANGE MENU STEP
 ROTATE DIAL TO CHANGE IN STEP
 PRESSING START (S2) STORES AND EXITS SERVICE MENU

USER SETTINGS MENU

TURN OFF POWER (S1)
 WAIT FOR AT LEAST 5 SEC
 HOLD S3
 TURN ON POWER (S1)
 PRESS S3 5 TIMES TO ENTER MENU