

OVEN SWITCH

POS.	0	30	60-240	270	300	330
4 - P2						
3 - P1						
1 - P1						
2 - P1						
5 - P3						

**HOB SWITCH
THE SEVEN POSITIONS OF THE SWITCH
ARE EQUIDISTANT DISTRIBUTED**

POS	0	6	5	4	3	2	1
4 - P2							
3 - P2							
3 - P1							
1 - P1							
2 - P1							
5 - P3							

