


342 7507 38

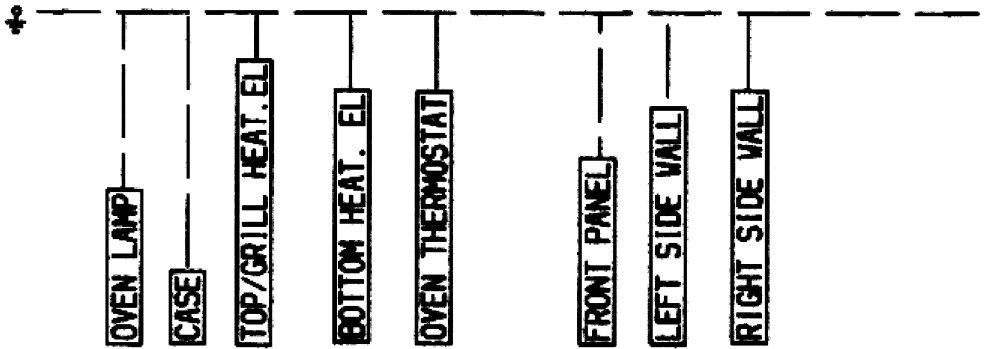

OVEN SWITCH

	⊕	⊖	⊖	⊖	⊖	
POS.	0	30	60+ 240	270	300	330
4-P2						
3-P1						
1-P1						
2-P1						
5-P3						