


NOTE: CONDITION OF OVEN
 1. DOOR CLOSED.
 2. COOKING TIME ENTERED.
 3. START KEY TOUCHED.

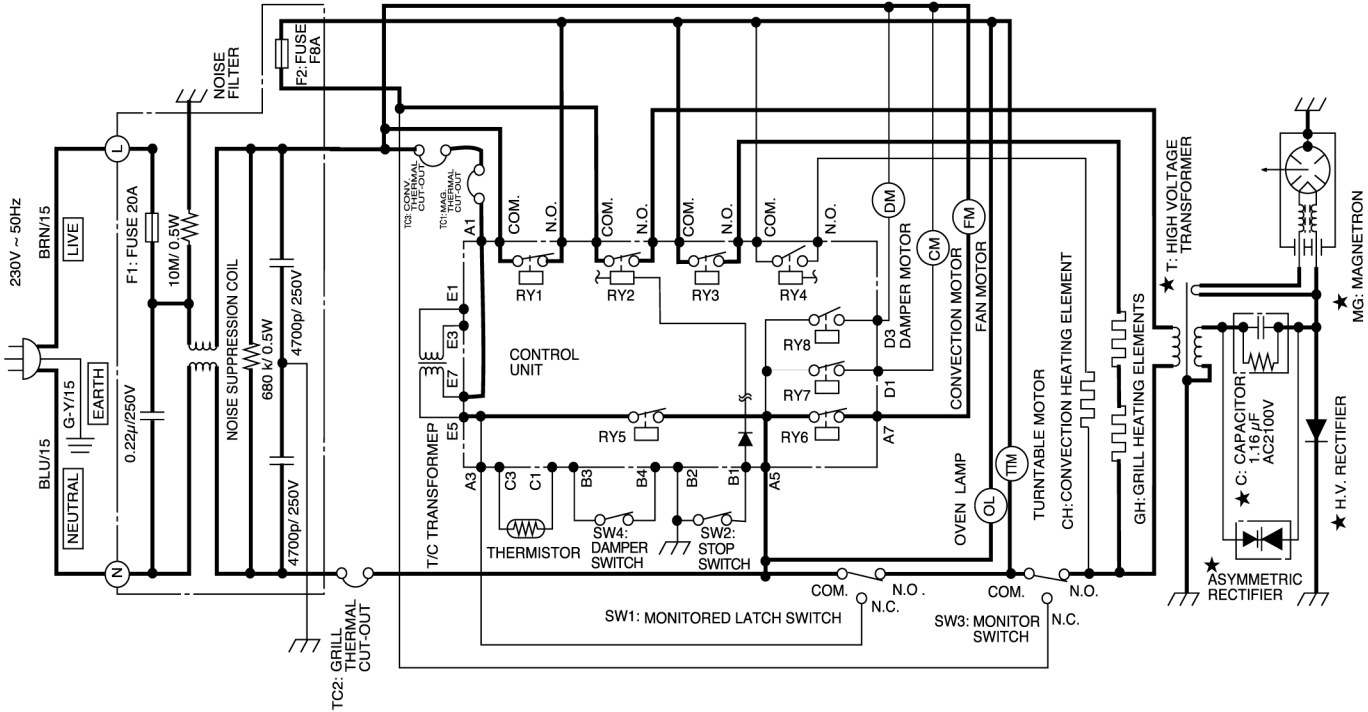

P07MW30000045