

SCHEMATIC
 NOTE: CONDITION OF OVEN
 1. DOOR CLOSED.
 2. COOKING TIME ENTERED.
 3. CONVECTION TEMPERATURE SELECTED.
 4. START KEY TOUCHED.

NOTE: When the convection temperatures 160 - 250 °C are selected, the grill heating element will be energized as back up.

