

SCHMATIC

NOTE: CONDITION OF OVEN

1. DOOR CLOSED.
2. COOKING TIME ENTERED.
3. DUAL MODE PAD TOUCHED TWICE.
4. MICROWAVE POWER LEVEL SELECTED.
5. STRAT KEY TOUCHED.

