


SCHEMATIC
NOTE: CONDITION OF OVEN
1. DOOR CLOSED.
2. COOKING TIME ENTERED.
3. GRILL MODE SELECTED.
3. START KEY TOUCHED.


NOTE: Convection heater will operate until oven cavity temperature rises to 220 °C

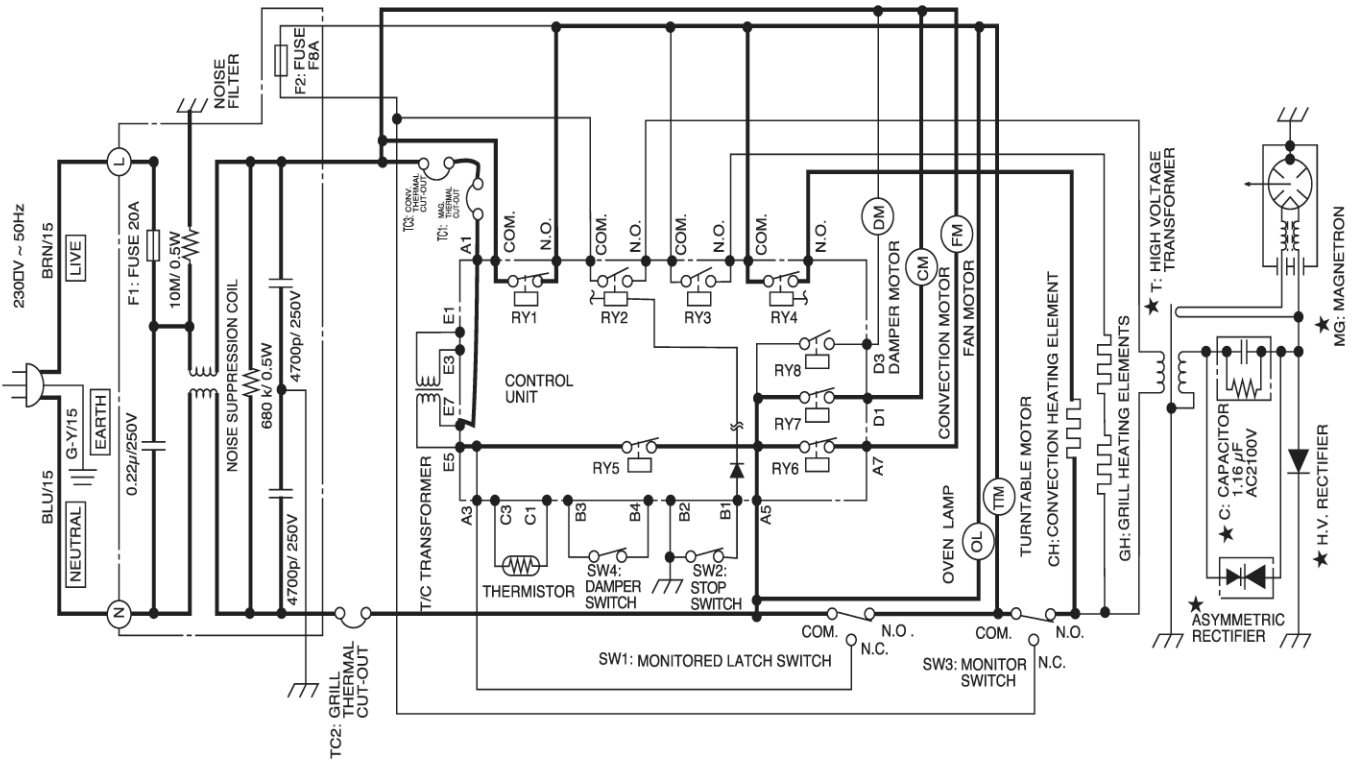

Oven Schematic-Grill cooking Condition (TOP GRILL mode)

SCHEMATIC
NOTE: CONDITION OF OVEN
1. DOOR CLOSED.
2. COOKING TIME ENTERED.
3. CONVECTION TEMPERATURE SELECTED.
4. START KEY TOUCHED.

NOTE: When the convection temperatures 160 - 250 °C are selected the grill heating element will be energized as back up.

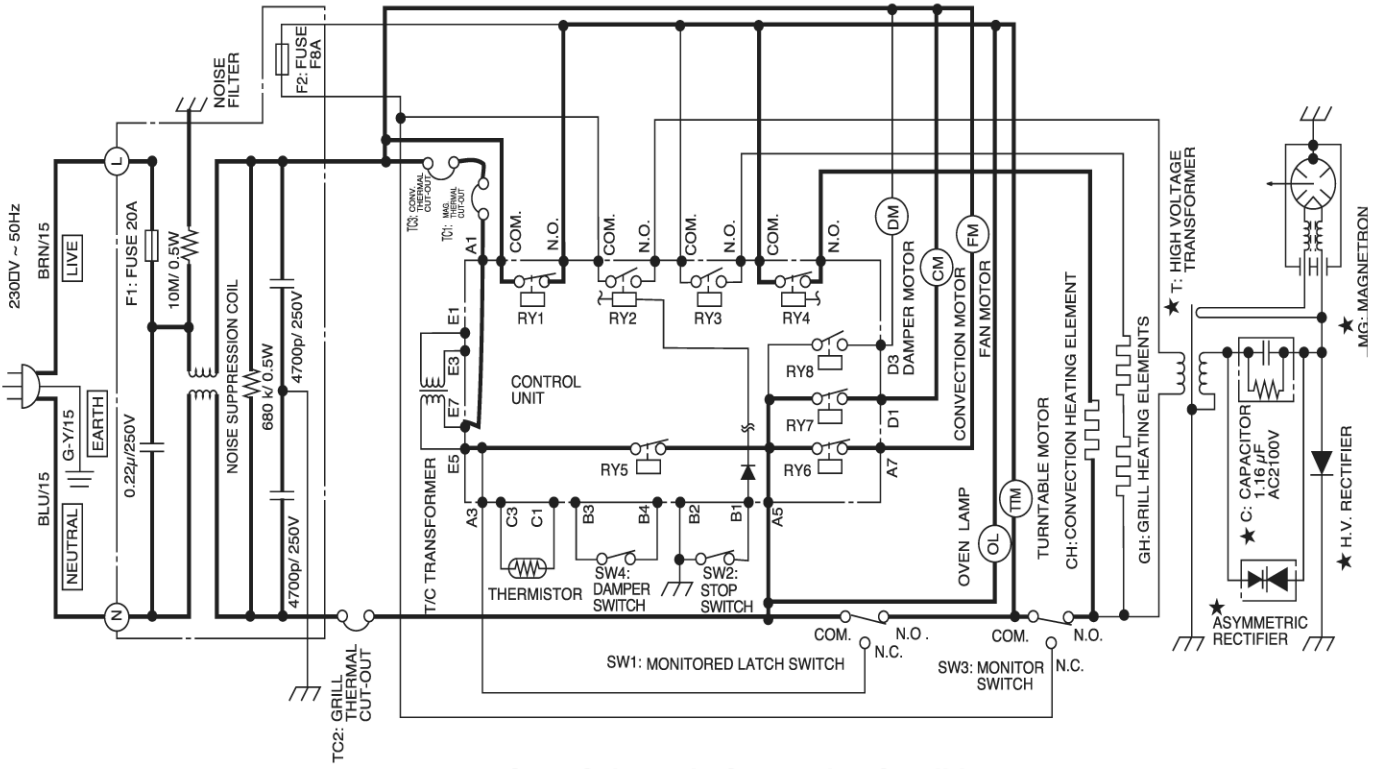

Oven Schematic-Convection Condition