

WIRING DIAGRAM (INDOOR UNIT)

202502290099

POWER SETTING :

ENC1	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2
MODEL	20	26	32/35	53
FACTORY SETTING	ACCORDING TO RELATED MODEL.			

FOR TEMP. COMPENSATION

SW6	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2
CODE	6°C	2°C	4°C	According to E Function
FACTORY SETTING	✓			

FOR ANTI-COLD WIND

SW1	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2
TE1	28	30	Fan motor do not stop.	According to E Function
TE2	30	32		
TE3	24	28		
TE4	15	24		
TE5	32	35		
TE6	30	32		
FACTORY SETTING	✓			

FOR SETTING NETADDRESS

S1+S2	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2	<input checked="" type="checkbox"/> ON 1 2
CODE	0~F	0~F	0~F	0~F
NETADDRESS	0~15	16~31	32~47	48~63
FACTORY SETTING	✓			

FOR SETTING AUTO-RESTART

SW3	<input checked="" type="checkbox"/> ON 1	<input checked="" type="checkbox"/> ON 1
AUTO-RESTART	ACTIVE	INACTIVE
FACTORY SETTING	✓	

