



A = SWITCH  
 B1 = LIGHT KNOB THERMOSTAT  
 B2 = LIGHT OVEN  
 B3 = LIGHT INDICATOR  
 B4 = LIGHT KNOB SWITCH  
 L1 = LIGHT OVEN RIGHT  
 L1 = LIGHT OVEN LEFT  
 Q1 = KLIXON SAFETY  
 Q2 = KLIXON COOLING FAN  
 P = ELECTRONIC TOUCH CONTROL

RF4 = RING ELEMENT  
 RF5 = GRILL ELEMENT  
 RF6 = OUTER TOP ELEMENT  
 RF7 = BOTTOM ELEMENT  
 SP = RELAY CIRCUIT BOARD  
 SC = MEAT PROBE  
 T1 = THERMOSTAT  
 V = OVEN FAN  
 VT = COOLING FAN  
 X = THERMINAL CONNECTION

Z = NOISE FILTER