



wiring mains terminal
article number code 387 9487 00

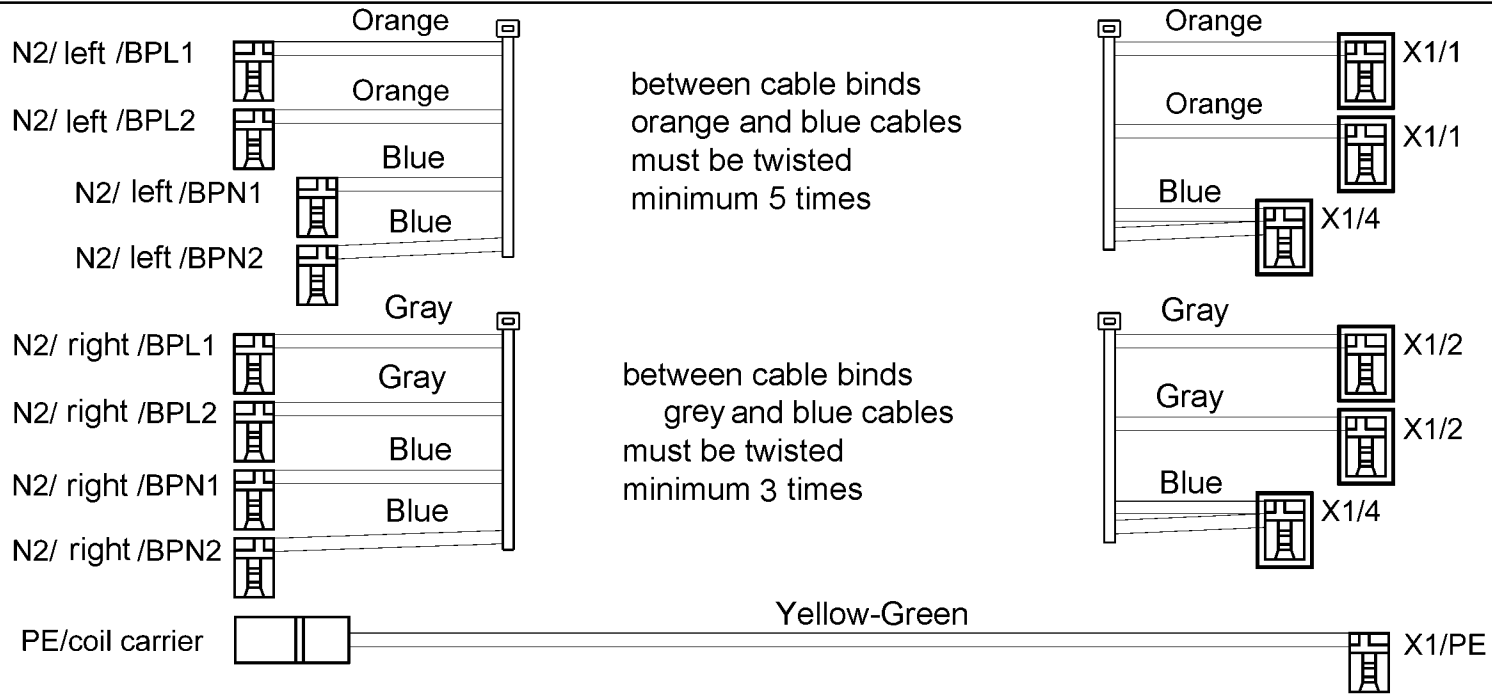

view from top

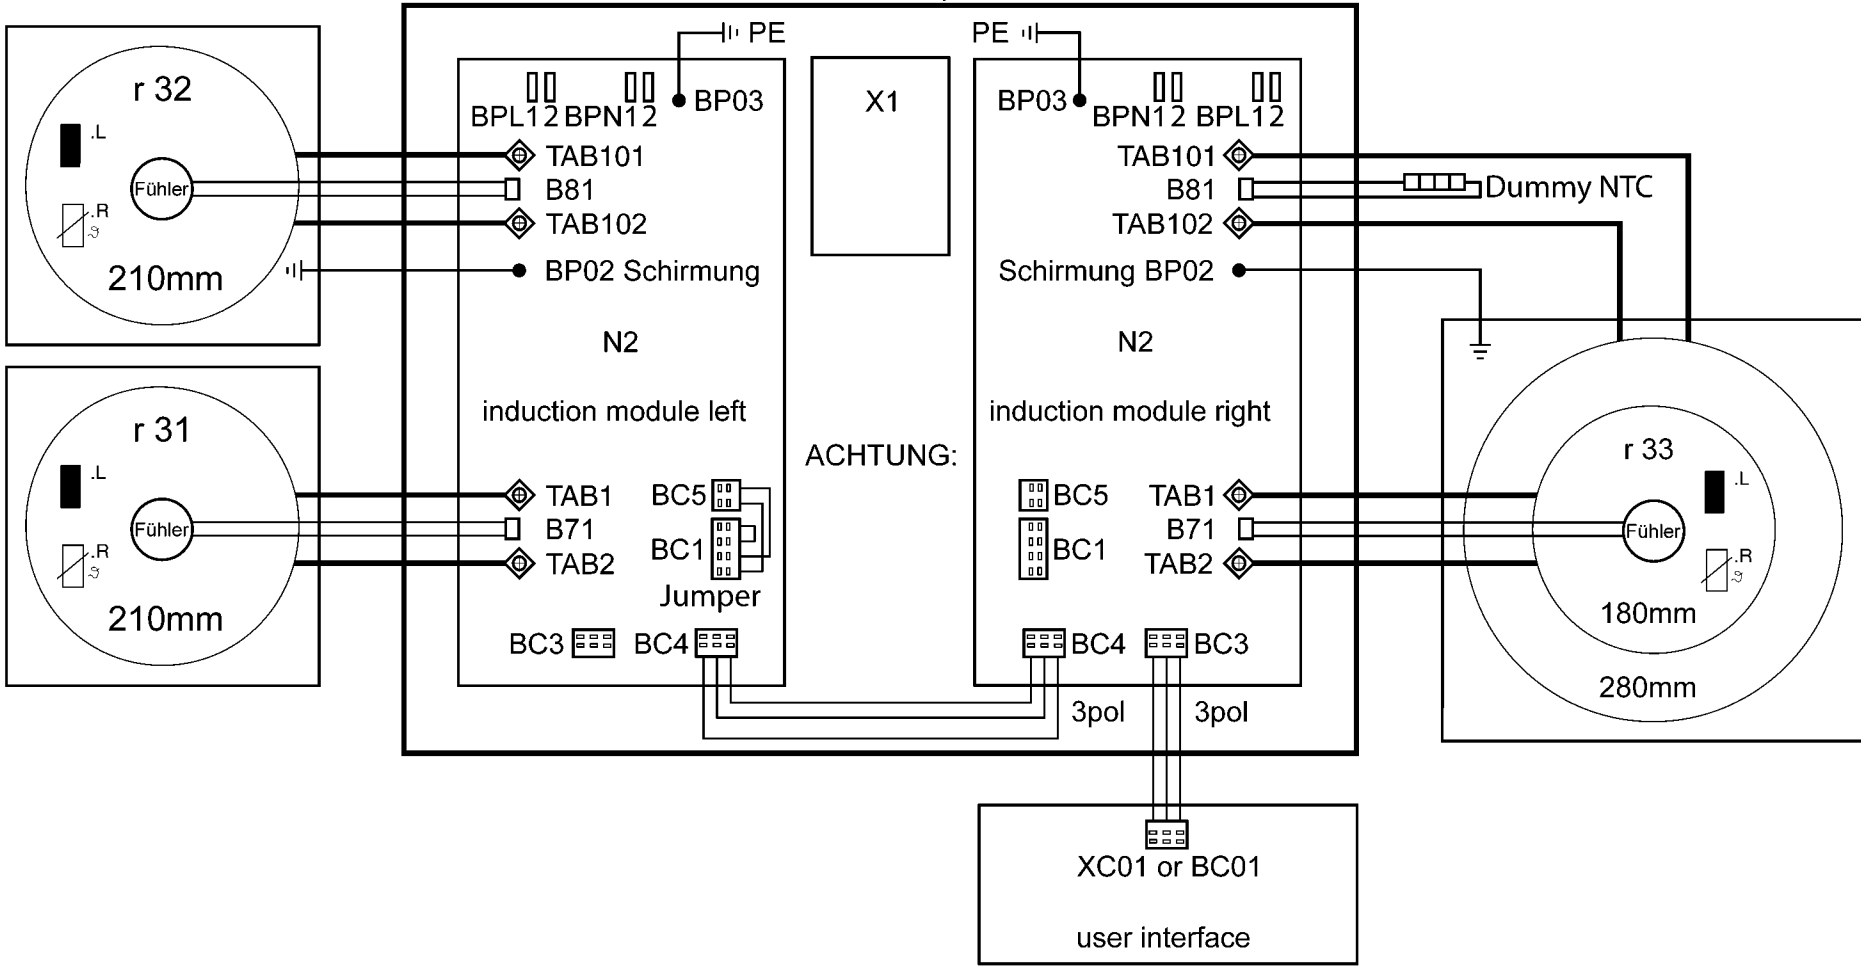

control lines

contact

article number code

induction module left/BC4 - induction module right/BC4	387 729 902
induction module right/BC3 - user interface XC01 or BC01	387 812 100
induction module right/B81 (Dummy NTC)	387 540 300