


NOTE: ..... DENOTES NOT ON ALL MODELS.

P.T.C. STARTER WITH RUN CAPACITOR

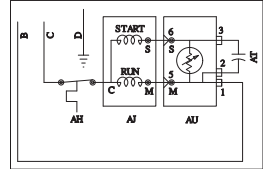

CAPACITOR IS ONLY USED WITH SOME P.T.C. MODELS.