


NOTE: DENOTES NOT ON ALL MODELS.

P.T.C. STARTER WITH RUN CAPACITOR

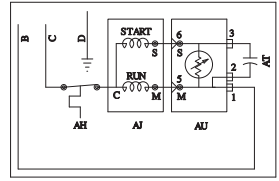

CAPACITOR IS ONLY USED WITH SOME P. T. C. MODELS.