

OVEN SWITCH ①

FUNCTIONS					
POSITIONS	0	1	2	3	4
	0	60	120	180	240
	6 - P6				300
	5 - P5				
	4 - P4				
	3 - P3				
	2 - P2				
	1 - P1				

