

OVEN SWITCH 1

FUNCTIONS					
POSITIONS	0	1	2	3	4
	0	60	120	180	240
	0	60	120	180	240
6 - P6					
5 - P5					
4 - P4					
3 - P3					
2 - P2					
1 - P1					

PLATE SWITCH 2

POS	0	1	2	3	4	5	6
4 - P2							
3 - P2							
3 - P1							
1 - P1							
2 - P1							
5 - P3							

