



OVEN SWITCH: A12665501

POSITIONS	1	2	3	4	5	6	7	8	9	FUNCTIONS
0	X			X	X	X	X	X	X	90°C
1	X	X	X	X	X	X	X	X	X	90-100°C
2	X	X	X	X	X	X	X	X	X	100-110°C
3	X	X	X	X	X	X	X	X	X	110-120°C
4	X	X	X	X	X	X	X	X	X	120-144°C
5	X	X	X	X	X	X	X	X	X	144-160°C
6	X	X	X	X	X	X	X	X	X	160-180°C
7	X	X	X	X	X	X	X	X	X	180-216°C
8	X	X	X	X	X	X	X	X	X	216-252°C
9	X	X	X	X	X	X	X	X	X	252-288°C
	X	X	X	X	X	X	X	X	X	288-324°C

SWITCHING DIAGRAM