


Control panel

Model : GSC 5050 WL

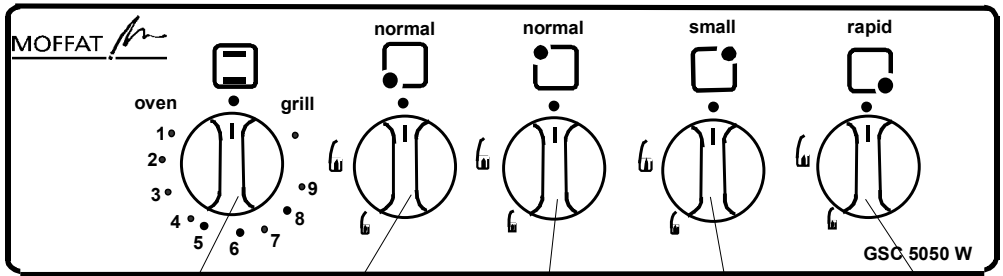

OVEN/GRILL
KNOB


FRONT
LEFT
BURNER
CONTROL
KNOB

BACK
LEFT
BURNER
CONTROL
KNOB

BACK
RIGHT
BURNER
CONTROL
KNOB

FRONT
RIGHT
BURNER
CONTROL
KNOB

Hob

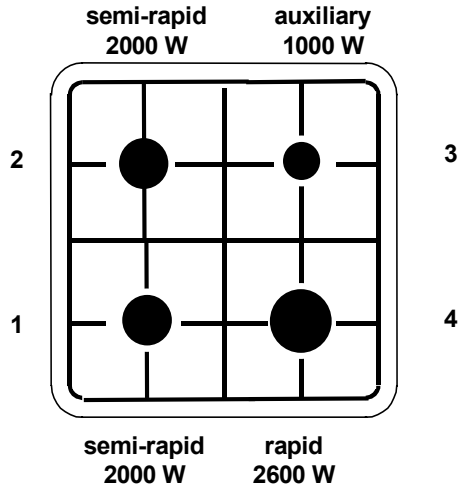

1. Front left burner (semi-rapid)
2. Back left burner (semi-rapid)
3. Back right burner (auxiliary)
4. Front right burner (rapid)

BURNER	By-pass
RAPIDE	0,42
SEMIRAPIDE	0,32
AUXILIAIRE	0,29
OVEN/GRILL	0,46