


OVEN SWITCH
46.23866.862

	0	30	60	270	300	330
4-P2		■	■	■	■	■
3-P1			■	■	■	■
1-P1				■	■	■
2-P1					■	■
5-P3						■

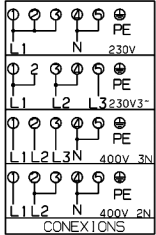

HOB SWITCH (clockwise rotation)

	POS	0	1	2	3	4	5	6
4 - P2			■	■	■	■	■	■
3 - P2				■	■	■	■	■
3 - P1					■	■	■	■
1 - P1						■	■	■
2 - P1							■	■
5 - P3								■

