


HOB SWITCH (clockwise rotation)

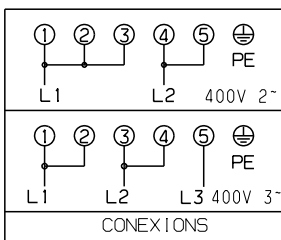

POS	0	1	2	3	4	5	6
4 - P2							
3 - P2							
3 - P1							
1 - P1							
2 - P1							
5 - P3							

46. 27266. 620

OVEN SWITCH

342 7585 01

POS.	0	1	2	3	4	5	6
1-P1							
2-P2							
3-P3							
4-P4							
5-P5							
6-P6							
7-P7							
8-P8							

