


HOB SWITCH (clockwise rotation)

POS	0	1	2	3	4	5	6
4 - P2			■	■	■	■	■
3 - P2		■					
3 - P1			■				
1 - P1		■					
2 - P1			■				
5 - P3		■	■	■	■	■	■

46.27266.620

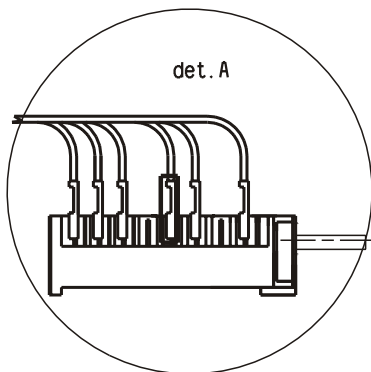

OVEN SWITCH

342 7585 01

POS.	0	1	2	3	4	5	6
1-P1		■	■	■	■	■	■
2-P2			■	■	■	■	■
3-P3			■	■	■	■	■
4-P4			■	■	■	■	■
5-P5			■	■	■	■	■
6-P6		■					
7-P7		■					
8-P8		■	■	■	■	■	■