


74

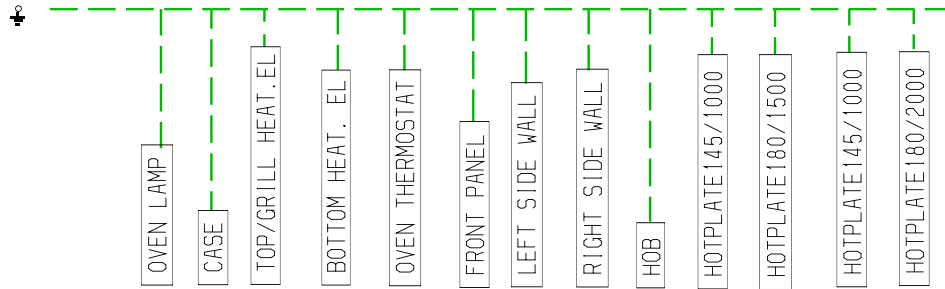

HOB SWITCH

POS	0	6	5	4	3	2	1
4 - P2							
3 - P2							
3 - P1							
1 - P1							
2 - P1							
5 - P3							

OVEN SWITCH

POS.	A	0	72	144	216	288
4-P2						
3-P1						
1-P1						
2-P1						
5-P3						

