
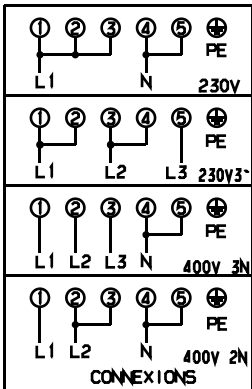


## 74

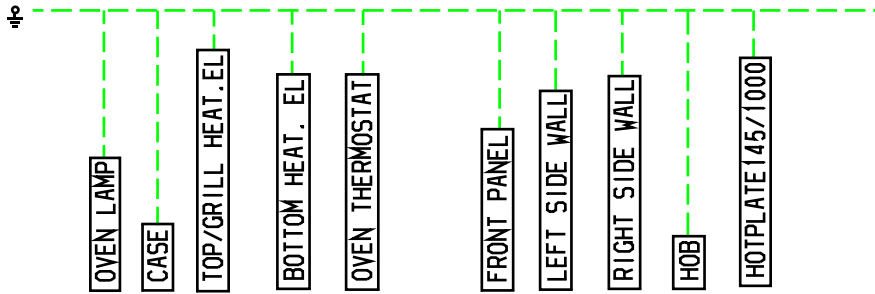

### HOB SWITCH

POS	0	6	5	4	3	2	1
4 - P2							
3 - P2							
3 - P1							
1 - P1							
2 - P1							
5 - P3							

### OVEN SWITCH

POS.	0	72	144	216	288
4-P2					
3-P1					
1-P1					
2-P1					
5-P3					