



OVEN SWITCH

POS.	0	72	144	216	288
4-P2		—	—	—	—
3-P1		—	—	—	—
1-P1		—	—	—	—
2-P1		—	—	—	—
5-P3		—	—	—	—

HOB SWITCH

POS	0	6	5	4	3	2	1
4 - P2		—	—	—	—	—	—
3 - P2		—	—	—	—	—	—
3 - P1		—	—	—	—	—	—
1 - P1		—	—	—	—	—	—
2 - P1		—	—	—	—	—	—
5 - P3		—	—	—	—	—	—