



OVEN SWITCH
342 1340 01 (46.26866.521)

	0						
4 - P2							
3 - P1							
1 - P1							
2 - P1							
5 - P3							