



OVEN SWITCH 342 7585 01(4208000.033)

POS.	0	1	2	3	4	5	6	7
1-P1								
2-P2								
3-P3								
4-P4								
5-P5								
6-P6								
7-P7								
8-P8								

POSITION	0	1	max
S	○	○	○
P2	○	○	○
P1	○	○	○

