



OVEN SWITCH					
POS.	0	72	144	216	288
4-P2					
3-P1					
1-P1					
2-P1					
5-P3					

