



OVEN SWITCH

POS.	0	1	2	3	4	5	6
1-P1		■					
2-P2			■				
3-P3				■			
4-P4					■		
5-P5						■	
6-P6							■
7-P7		■	■	■	■	■	■
8-P8							■