



OVEN SWITCH

POS.	0	1	2	3	4	5	6
1-P1		■					
2-P2		■					
3-P3			■				
4-P4				■			
5-P5					■		
6-P6		■					
7-P7		■					
8-P8		■					

