



OVEN SWITCH  
3570439

POS.	0	72	144	216	288
4-P2					
3-P1					
1-P1					
2-P1					
5-P3					

HOB SWITCH

POS	0	6	5	4	2	1
4-P2						
3-P2						
3-P1						
1-P1						
2-P1						
5-P3						