



OVEN SWITCH
342 1340 01 (46.26866.521)

	0	60	120	180	240	300
4 - P2						
3 - P1						
1 - P1						
2 - P1						
5 - P3						

HOB SWITCH
46.27266.500

POS	0	6	5	4	2	1
4-P2						
3-P2						
3-P1						
1-P1						
2-P1						
5-P3						