



342 1340 01 (46.26866.521)

OVEN SWITCH

	4 - P2						
	3 - P1						
	1 - P1						
	2 - P1						
	5 - P3						

HOB SWITCH
46.27266.500

POS	0	1	2	3	4	5	6
4-P2							
3-P2							
3-P1							
1-P1							
2-P1							
5-P3							

