



OVEN SWITCH

POS.	0	1	2	3	4	5	6
1-P1		■	■	■	■	■	■
2-P2			■	■	■	■	■
3-P3				■	■	■	■
4-P4					■	■	■
5-P5						■	■
6-P6			■	■	■	■	■
7-P7				■	■	■	■
8-P8		■	■	■	■	■	■

