



OVEN SWITCH

42. 00000. 045

POS.	0	1	2	3	4	5	6	7	8	9
1-P1		☹	▬							
2-P2			▬							
3-P3				▬						
4-P4					▬					
5-P5						▬				
6-P6							▬			
7-P7								▬		
8-P8									▬	