



OVEN SWITCH

| POS. | 0 | 60 | 120 | 180 | 240 | 300 |
|------|---|----|-----|-----|-----|-----|
| 4-P2 |   |    |     |     |     |     |
| 3-P2 |   |    |     |     |     |     |
| 3-P1 |   |    |     |     |     |     |
| 1-P1 |   |    |     |     |     |     |
| 2-P1 |   |    |     |     |     |     |
| 5-P3 |   |    |     |     |     |     |

HOB SWITCH

| POS  | 0 | 6 | 5 | 4 | 3 | 2 | 1 |
|------|---|---|---|---|---|---|---|
| 4-P2 |   |   |   |   |   |   |   |
| 3-P2 |   |   |   |   |   |   |   |
| 3-P1 |   |   |   |   |   |   |   |
| 1-P1 |   |   |   |   |   |   |   |
| 2-P1 |   |   |   |   |   |   |   |
| 5-P3 |   |   |   |   |   |   |   |