



OVEN SWITCH

POS.	0	72	144	216	288
4-P2		▬		▬	
3-P1		▬		▬	▬
1-P1					▬
2-P1		▬	▬		
5-P3		▬	▬	▬	▬