



OVEN SWITCH

|      | 0 | 1 | 2 | 3 | 4 | 5 | 6 | ETC |
|------|---|---|---|---|---|---|---|-----|
| POS. |   |   |   |   |   |   |   |     |
| 1-P1 |   |   |   |   |   |   |   |     |
| 2-P2 |   |   |   |   |   |   |   |     |
| 3-P3 |   |   |   |   |   |   |   |     |
| 4-P4 |   |   |   |   |   |   |   |     |
| 5-P5 |   |   |   |   |   |   |   |     |
| 6-P6 |   |   |   |   |   |   |   |     |
| 7-P7 |   |   |   |   |   |   |   |     |
| 8-P8 |   |   |   |   |   |   |   |     |

DOUBLE ENERGY REGULATOR

| POSITION | 0 | 1 | 3max |
|----------|---|---|------|
| S → S    |   |   |      |
| P2 → 4   |   |   |      |
| P1 → 1   |   |   |      |
| 4 → 4A   |   |   |      |

ENERGY REGULATOR

| POSITION | 0 | 1 | max |
|----------|---|---|-----|
| S → S    |   |   |     |
| P2 → 4   |   |   |     |
| P1 → 1   |   |   |     |