


OVEN SWITCH
342152701

POS.	0	1	2	3	4	5	6	7	8	9
1-P1										
2-P2										
3-P3										
4-P4										
5-P5										
6-P6										
7-P7										
8-P8										

OVEN SWITCH	0	1	2	3	4	5	6	7	8	9
1-P1										
2-P2										
3-P3										
4-P4										
5-P5										
6-P6										
7-P7										
8-P8										

342 7576 21(42.00000.045)

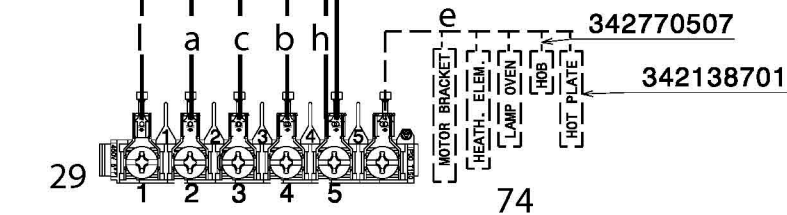

HOB SWITCH

POS	0	6	5	4	3	2	1
4-P2							
3-P2							
3-P1							
1-P1							
2-P1							
5-P3							

387 2073 00(46.27266.500)