



OVEN SWITCH

| POS. | 0 | 60 | 120 | 180 | 240 | 300 |
|------|---|----|-----|-----|-----|-----|
| 4-P2 | | | | | | |
| 3-P1 | | | | | | |
| 1-P1 | | | | | | |
| 2-P1 | | | | | | |
| 5-P3 | | | | | | |

342 1340 01 (46.26866.521)

OVEN SWITCH

| POS. | 0 | 60 | 120 | 180 | 240 | 300 |
|------|---|----|-----|-----|-----|-----|
| 4-P2 | | | | | | |
| 3-P1 | | | | | | |
| 1-P1 | | | | | | |
| 2-P1 | | | | | | |
| 5-P3 | | | | | | |

342153201 (46.26866.525)

HOB SWITCH

| POS. | 0 | 6 | 5 | 4 | 3 | 2 | 1 |
|------|---|---|---|---|---|---|---|
| 4-P2 | | | | | | | |
| 3-P1 | | | | | | | |
| 1-P1 | | | | | | | |
| 2-P1 | | | | | | | |
| 5-P3 | | | | | | | |

387 2073 00146.27266.500