



OVEN SWITCH	0	60	120	180	240	300
4 - P2		■	■	■	■	■
3 - P1		■		■		
1 - P1		■				
2 - P1						■
5 - P3						

342 1340 01 (46.26866.521)

OVEN SWITCH	0	60	120	180	240	300
4 - P2		■	■	■	■	■
3 - P1		■		■		
1 - P1		■				
2 - P1						■
5 - P3						

342153201 (46.26866.525)

OVEN SWITCH	0	60	120	180	240	300
4 - P2		■	■	■	■	■
3 - P1		■		■		
1 - P1		■				
2 - P1						■
5 - P3						

3570069 (46.26866.814)