



OVEN SWITCH

POS.	0	72	144	216	288
4-P2		■		■	
3-P1			■		■
1-P1				■	
2-P1		■			
5-P3			■		

3570439 (45. 25865. 808)

HOB SWITCH

POS.	0	5	5	4	3	2	1
4-P2		■					
3-P2			■				
3-P1				■			
1-P1					■		
2-P1		■					
5-P3			■				

387 2073 00(45. 27266. 500)