



OVEN SWITCH

	0	1	2	3	4	5	6	7
POS.								
1-P1								
2-P2								
3-P3								
4-P4								
5-P5								
6-P6								
7-P7								
8-P8								

8075222(42.06001.009)

HOB SWITCH

	POS 0	6	5	4	3	2	1
4-P2							
3-P2							
3-P1							
1-P1							
2-P1							
5-P3							

387 2073 00(46.27266.500)