 




FRZ sensor

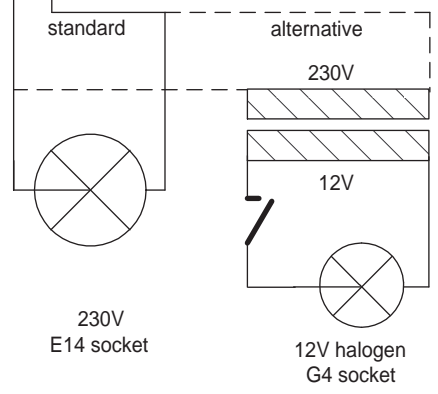


- (K) Compressor
- (H) Starting device
- (C) Run capacitor
- (F) Flexible cord
- (E) Earth cabinet

LIVE
NEUTRAL

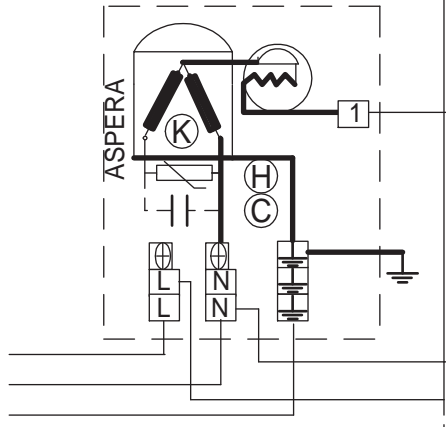

LIVE
NEUTRAL

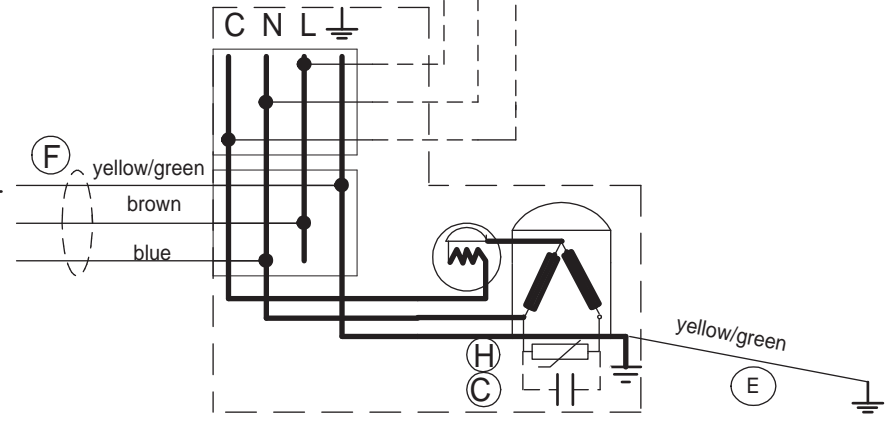

S208 05 88B