

SERVICE BULLETIN

Dometic GmbH, In der Steinwiese 16, D-57074 Siegen

RMT 7XXX, Oven CMBO

Oven, flame does not keep burning!

It might happen, that the flame of the oven extingts after a short time of operation. This can have two reasons:

1. The oven is not built in according to instructions. Too little air supply.
2. A more common reason is, that the thermal (incoming air is aspirated, outgoing air evacuated through the chimney) has not been built up yet. Due to this, we recommend, to leave open the oven door for 2-3 minutes.

