

# Service-Bulletin

Washing machines


599 530 217 EN

## Toploader

### 1. Noises at the side panel

Cause: Side panels are vibrating and become loose.

Measure: Remove side panels and stick in 3 foam parts each, No. 146277000/7.

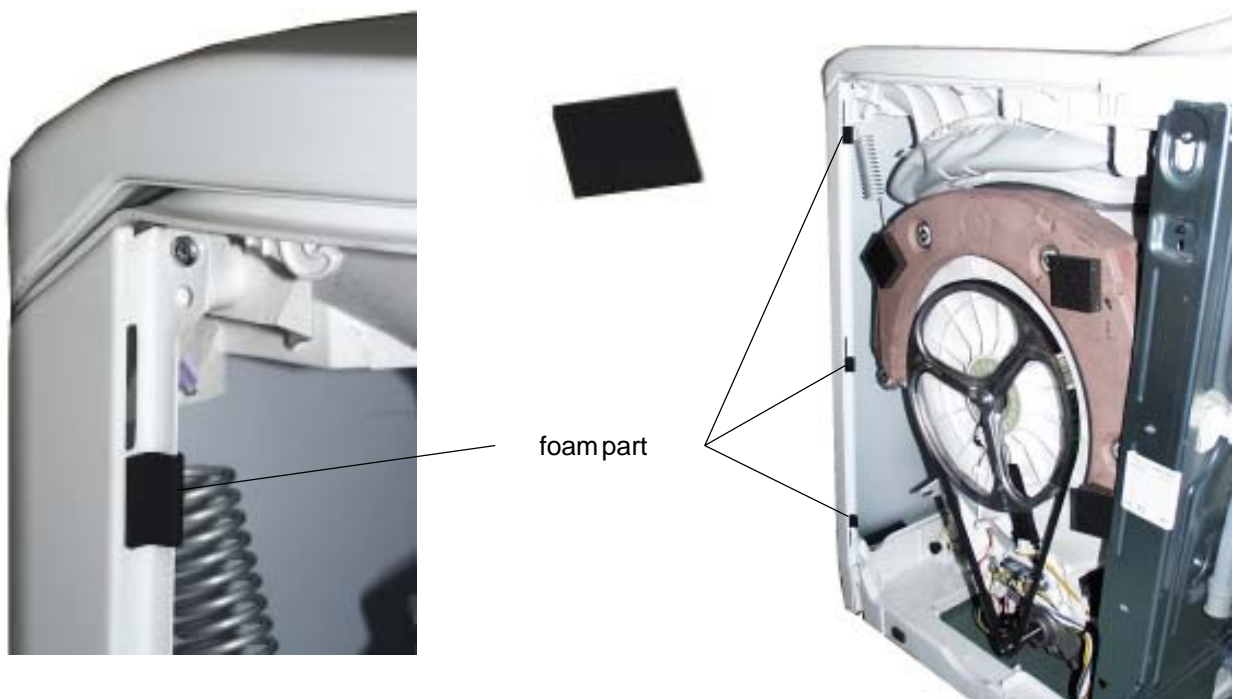

### 2. Transfer of vibrations through the floor

Cause: Vibrations on the floor may be transferred during the spinning cycle.

Measure: Put the washer onto rubber dampers (No. 5028378200/6) in the front (below both feet) and at the rear (below both rollers)..