

**NEW CLAMPS (REV.00)**







Some clamps are mounted inside the washing machines and once they have been used, they can not be used again, because while removing them, they deform and lose their characteristics.

These clamps are used to fasten the hoses that connect:

- the solenoid valve-to the conveyor
- the recirculation hose-to the rubber bellow
- the pressure chamber-to drain hose
- the tub-to the drain hose
- the detergent fill hose-to the detergent compartment

Find below the part no. and the position.

**SPARE PART NOS.**

Part no.	Diameter Ø	Position	
132 31 59-00/2	20.5 mm	Solenoid valve-conveyor hose	
		Recirculation hose	
132 31 59-10/1	18.5 mm	Solenoid valve-conveyor hose	
132 31 59-20/0	52.5 mm	Pressure chamber	
132 31 59-30/9	45.5 mm		
132 31 59-40/8	40.5 mm	Drain hose-pump body	
132 31 59-70/5	65.5 mm	Detergent fill hose	

Revision	Date	Description
00	09/2008	Document creation

EN	Publication no.	<b>599 71 18-12</b>	Rev. 00	09/2008	dmm
----	-----------------	---------------------	---------	---------	-----