

Washing machines

599 717 583 EN

**Toploader**  
**Noise during spinning**

**Cause:** Noises can be heard from inside the appliance when it is spinning. It is possible that this is caused by a loose drive motor.

**Measure:** Check the seat of the motor. If it should be loose, tighten both of the existing fastening screws and screw in an additional 5.5 x 38mm screw at the marked positioned. The spare part number for the screw is 105118100/4.

