

Dismounting instruction/ Favola



| | | | |
|----------|--|--|---|
| <p>1</p> | <p>Disassemble back cover, Base1, Screws</p> |  <p>Disassemble Wabblers type self-tapping screw 3*10mm 7pcs</p> |  <p>Wabblers type Screw driver T10</p> |
| <p>2</p> | <p>Disassemble knob, Left/Right plate</p> |  <p>Disassemble knob by tilted outward pull</p> <p>Disassemble Left/Right plate from behind pull</p> | |
| <p>3</p> | <p>Disassemble upper cover, small PCB board, steam PCB box</p> |  <p>Disassemble self-tapping screws 3*10mm thread cutting crosshead screws 6 pcs</p> |  <p>1# Crosshead screw driver</p> |
| <p>4</p> | <p>Disassemble steam valve system</p> |  <p>Steam system valve</p> |  <p>1# Crosshead screw driver</p> |

Disassemble self-tapping screws 3*10mm thread cutting crosshead screws 1 pc

5 Disassemble brewing unit, water outlet bracket screws



Disassemble brewing unit ,water outlet by self-tapping screws 3*10mm thread cutting crosshead screws 8 pcs



1# Crosshead scew driver

6 Disassemble Teflon tube of brewing unit



Teflon tube of Thermo block for Water in and out, water pipe connector seal ring, quick clamp each 2pc

Brewing unit



Angle jaw tongs

7 Disassemble Solenoid terminal, Solenoid valve



Solenoid valve

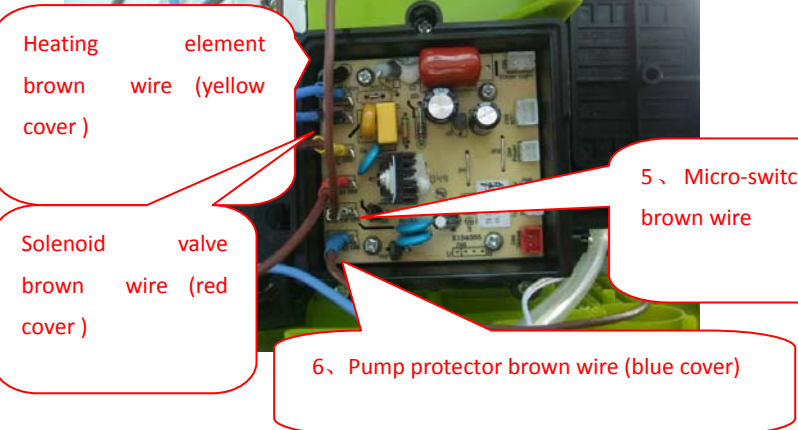
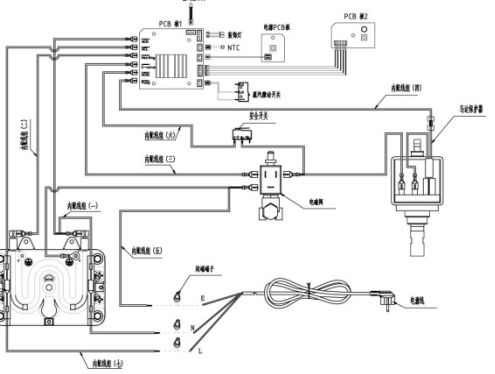


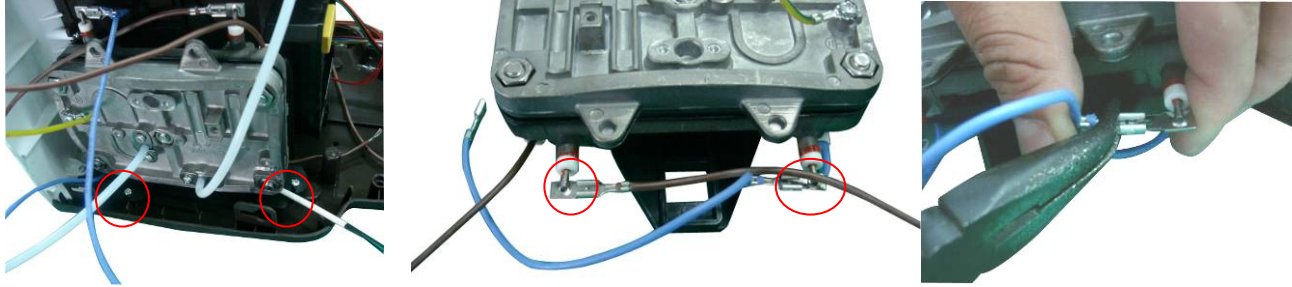


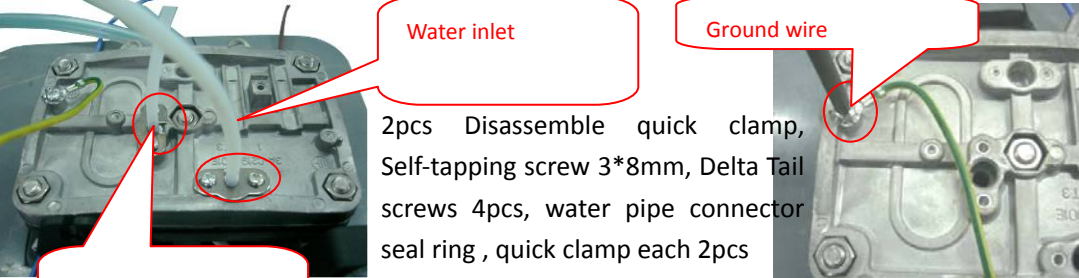

Pay attention to do not cut connecter pipe broken during cut the bundle of cool down box connecter

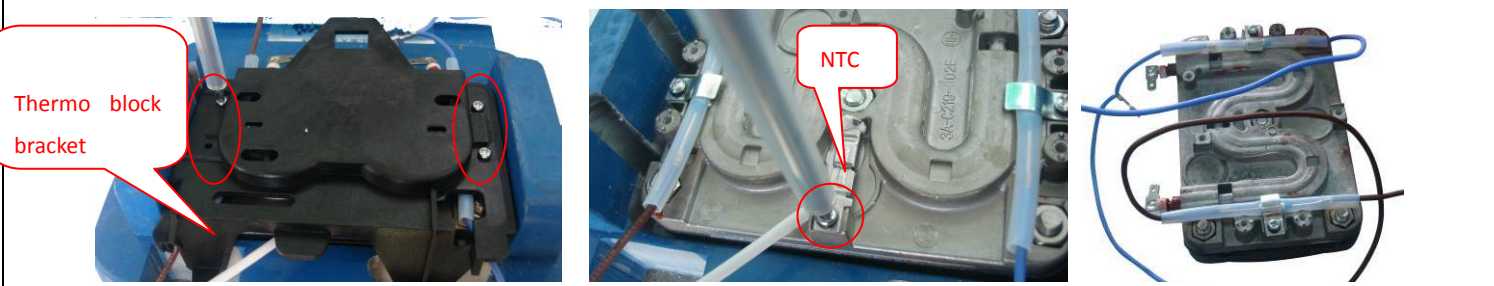

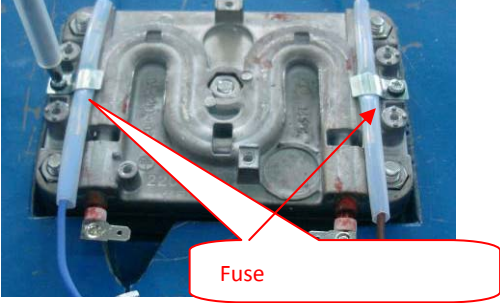

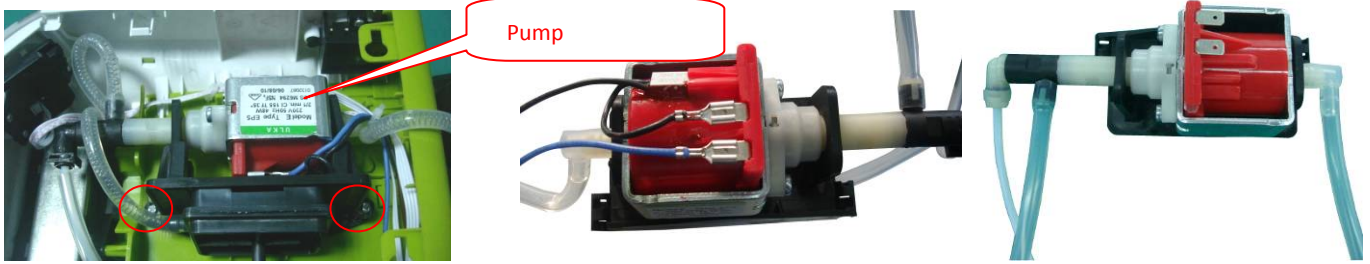



Angle jaw tongs



Diagonal pliers

| | | | | |
|-----------|---|---|---|---|
| <p>8</p> | <p>Disassemble PCB board terminal, PCB board</p> |  <p>Heating element brown wire (yellow cover)</p> <p>Solenoid valve brown wire (red cover)</p> <p>5. Micro-switch connection brown wire</p> <p>6. Pump protector brown wire (blue cover)</p> |  <p>PCB wiring diagram</p> |  <p>弯嘴钳 Angle jaw tongs</p>  <p>1# Crosshead screw driver</p> |
| <p>9</p> | <p>Disassemble thermo block set and base1 screws, terminals of thermo block set</p> |  <p>Disassemble thermo block unit , self-tapping screws 3*10mm thread cutting crosshead screws 2 pcs</p> | |  <p>1# Crosshead screw driver</p>  <p>Angle jaw tongs</p> |
| <p>10</p> | <p>Disassemble water input/outlet Teflon tube. ground wire screws</p> |  <p>Water inlet</p> <p>Ground wire</p> <p>water outlet pipe</p> <p>2pcs Disassemble quick clamp, Self-tapping screw 3*8mm, Delta Tail screws 4pcs, water pipe connector seal ring , quick clamp each 2pcs</p> | <p>Disassemble ground wire, oblate head self-tapping screws , Spring washer each 1 pc</p> |  <p>1# Crosshead screw driver</p> |

| | | | |
|-----------|--|---|---|
| <p>11</p> | <p>NTC - Disassemble thermo block bracket, NTC screw</p> |  <p>Disassemble thermo block bracket self-tapping screw 3*10mm ,Delta tail round head screws 4pcs, NTC self-tapping screw 3*8mm, Delta tail round head screw, NTC clamp each 1pc</p> |  <p>1# Crosshead scew driver</p> |
| <p>12</p> | <p>Disassemble fuse screws on thermo block</p> |  <p>Disassemble fuse , Self –tapping screw 3*8mm ,Delta tail round head screw 2pcs Fuse clamp , Spring washer 2pcs</p> |  <p>1# Crosshead scew driver</p> |
| <p>13</p> | <p>Disassemble pump bracket screws, Pump terminal, protector</p> |  <p>Disassemble pump bracket . Self tapping screws 3*10mm thread cutting round head screw 2pcs</p> |  <p>1 Crosshead scew driver Angle jaw tongs</p> |